




# PREMIER™ SERIES FIVE TANK INSTALLATION

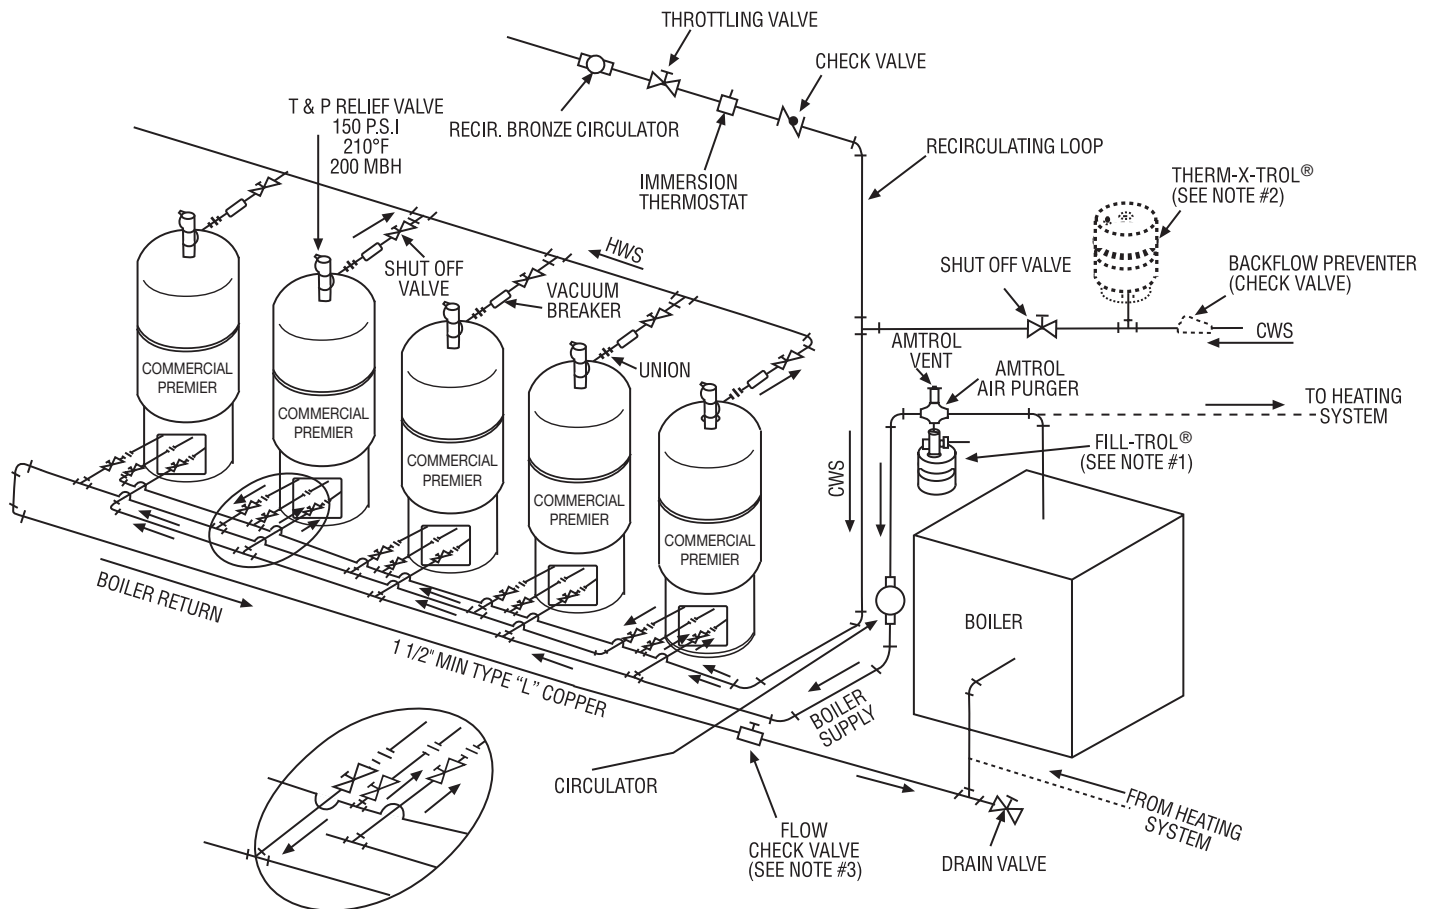

## NOTES:

1. FILL-TROL MUST BE SIZED TO HANDLE A BOILER SYSTEM THERMAL EXPANSION. ON LARGE SYSTEMS, AN ADDITIONAL EXTROL® MAY BE REQUIRED.
2. THERM-X-TROL IS REQUIRED WHEN THE DOMESTIC WATER SYSTEM HAS A BACKFLOW PREVENTION DEVICE OR CHECK VALVE ON THE INCOMING WATER LINE. CHECK THERM-X-TROL SIZING CHART FOR PROPER MODEL.
3. REQUIRED WHEN BOILER IS USED FOR BOTH SPACE HEATING AND DOMESTIC HOT WATER, (OR WHEN A FLOW CONTROL IS REQUIRED).