




# PREMIER™ SERIES ONE TANK INSTALLATION

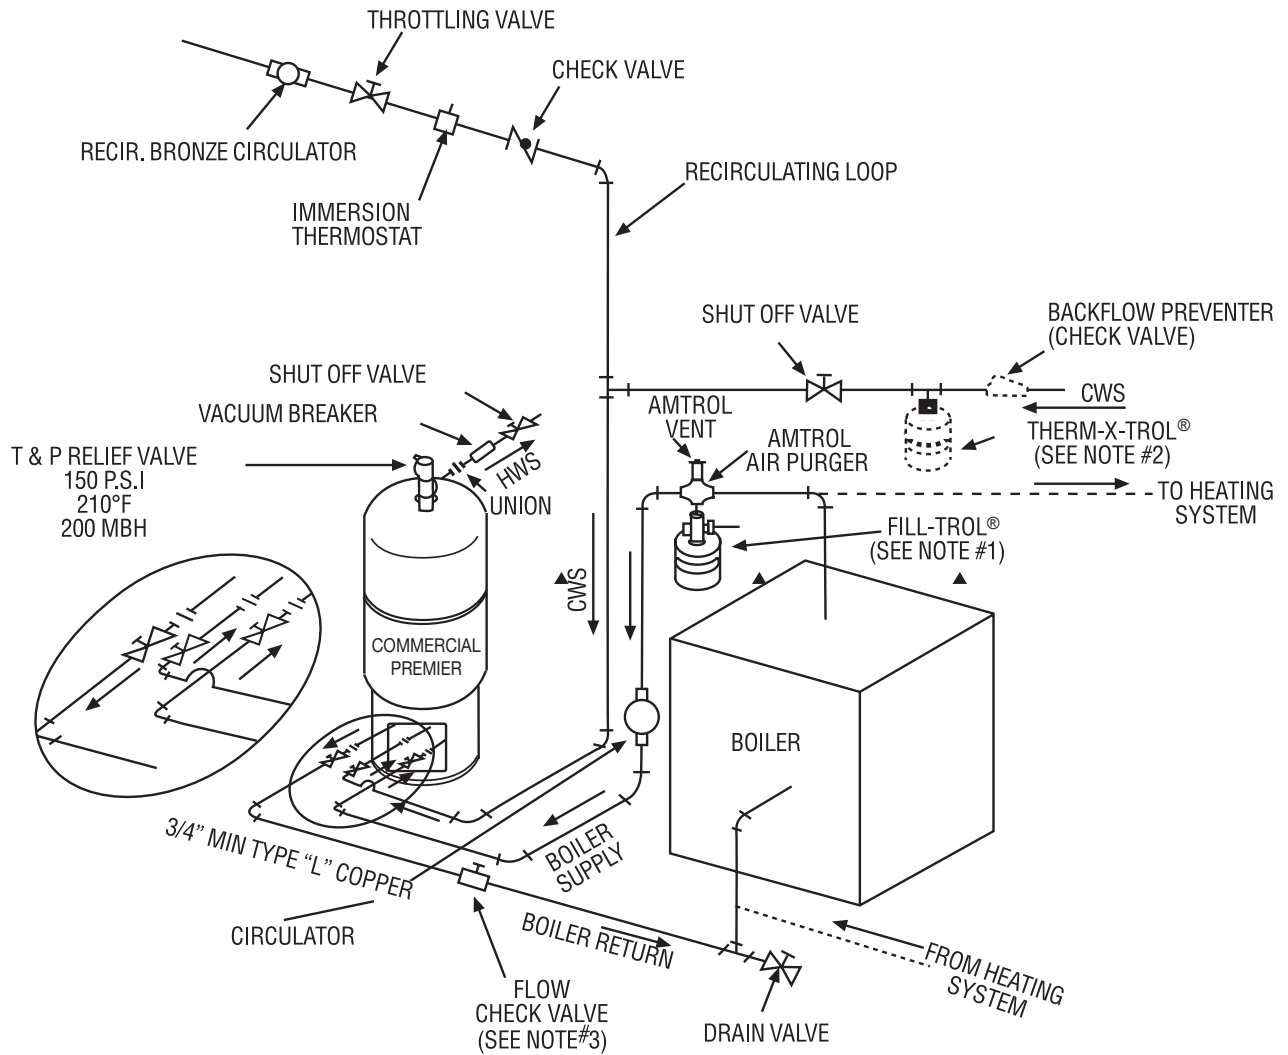

**NOTES:**


1. FILL-TROL MUST BE SIZED TO ACCOMMODATE THE THERMAL EXPANSION, WITHIN THE BOILER OPERATING RANGE.
2. THERM-X-TROL IS REQUIRED WHEN THE DOMESTIC WATER SYSTEM HAS A BACKFLOW PREVENTION DEVICE OR CHECK VALVE ON THE INCOMING WATER LINE. CHECK THERM-X-TROL SIZING CHART FOR PROPER MODEL.
3. REQUIRED WHEN BOILER IS USED FOR BOTH SPACE HEATING AND DOMESTIC HOT WATER, (OR WHEN A FLOW CONTROL IS REQUIRED).



1400 Division Road, West Warwick, RI USA 02893  
T: 800.426.8765 [www.amtrol.com](http://www.amtrol.com)



# PREMIER™ SERIES TWO TANK INSTALLATION

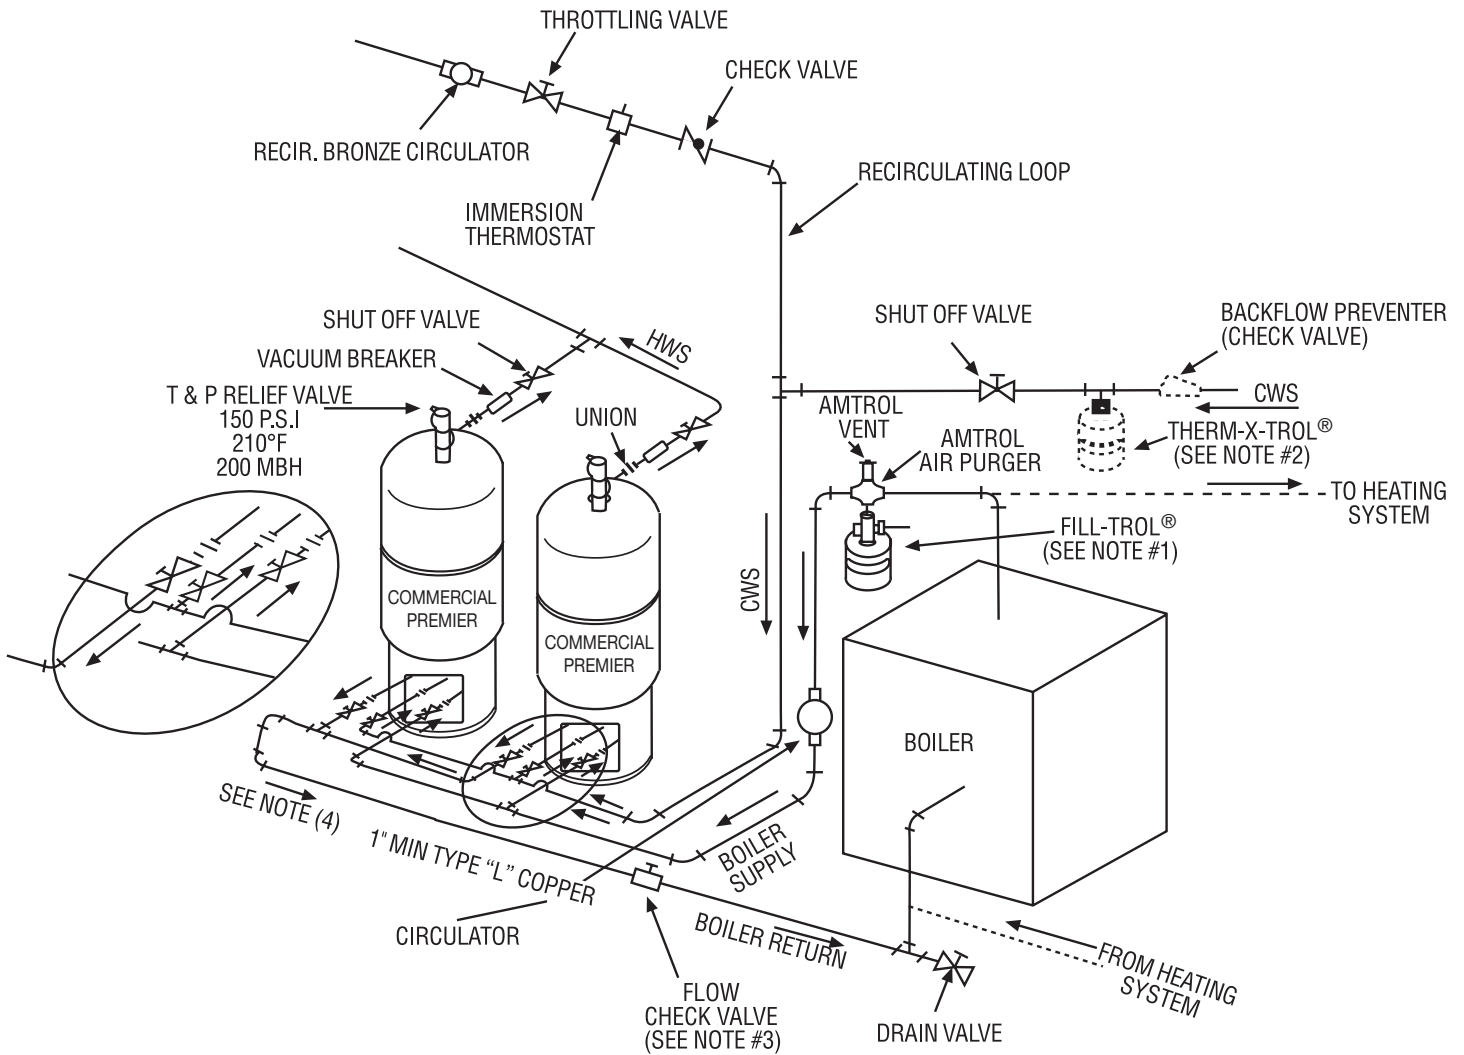

**NOTES:**


1. FILL-TROL MUST BE SIZED TO ACCOMMODATE THE THERMAL EXPANSION, WITHIN THE BOILER OPERATING RANGE.
2. THERM-X-TROL IS REQUIRED WHEN THE DOMESTIC WATER SYSTEM HAS A BACKFLOW PREVENTION DEVICE OR CHECK VALVE ON THE INCOMING WATER LINE. CHECK THERM-X-TROL SIZING CHART FOR PROPER MODEL.
3. REQUIRED WHEN BOILER IS USED FOR BOTH SPACE HEATING AND DOMESTIC HOT WATER, (OR WHEN A FLOW CONTROL IS REQUIRED).



1400 Division Road, West Warwick, RI USA 02893  
T: 800.426.8765 [www.amtrol.com](http://www.amtrol.com)



# PREMIER™ SERIES THREE TANK INSTALLATION

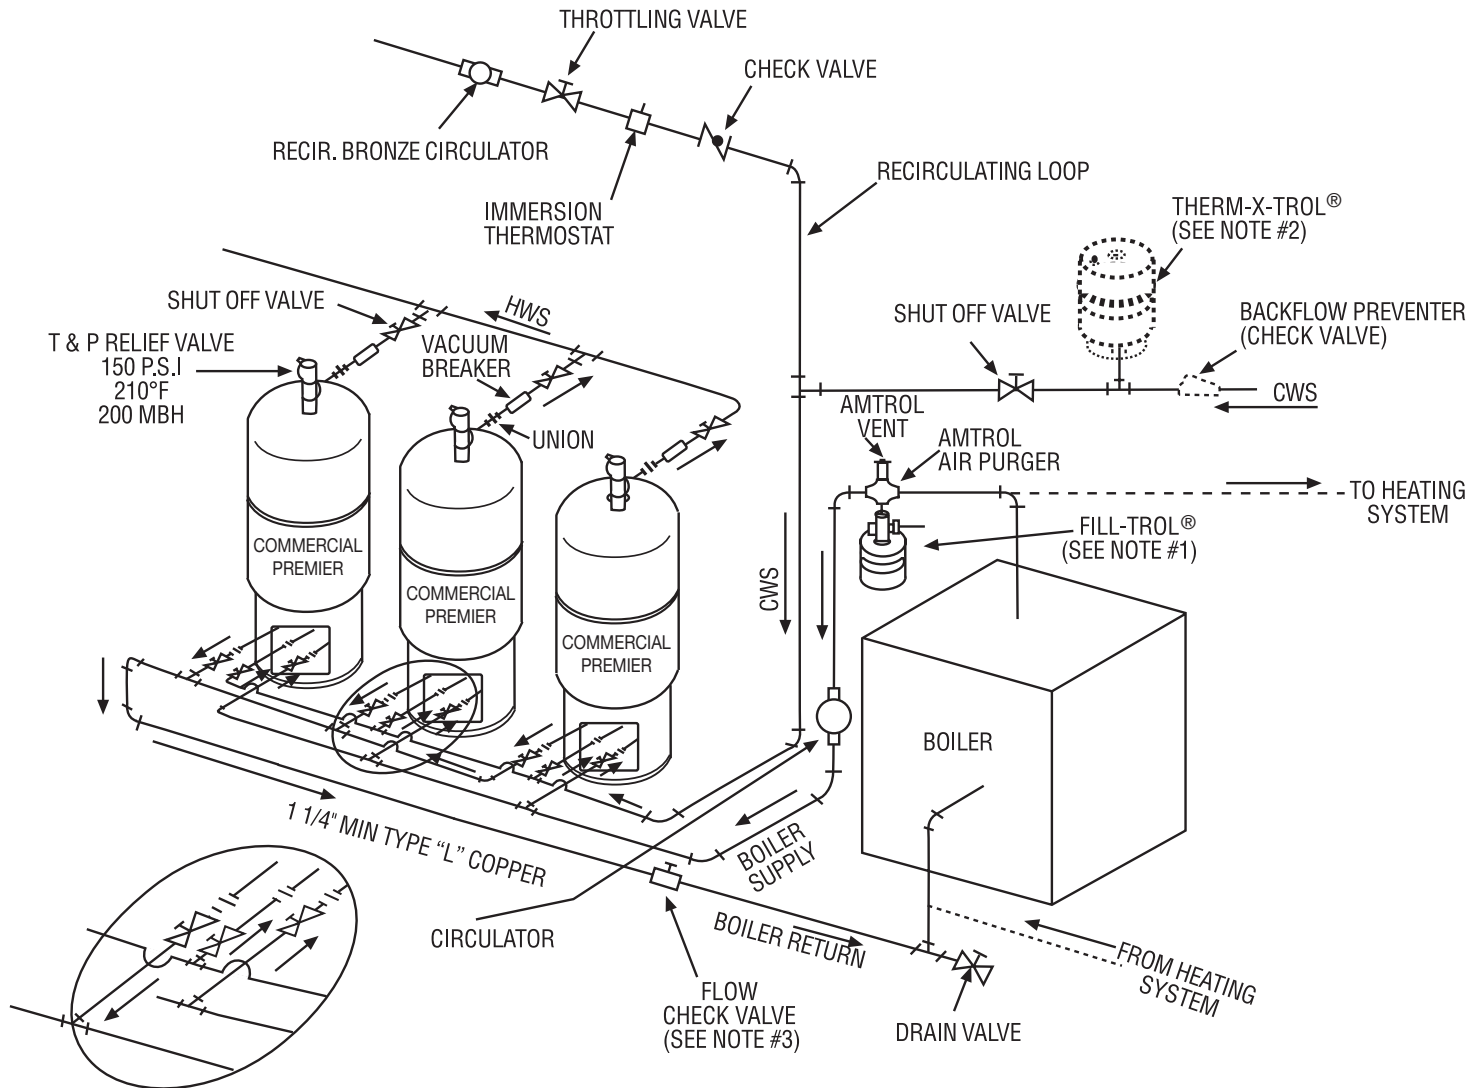

**NOTES:**


1. FILL-TROL MUST BE SIZED TO HANDLE A BOILER SYSTEM THERMAL EXPANSION. ON LARGE SYSTEMS, AN ADDITIONAL EXTROL® MAYBE REQUIRED.
2. THERM-X-TROL IS REQUIRED WHEN THE DOMESTIC WATER SYSTEM HAS A BACKFLOW PREVENTION DEVICE OR CHECK VALVE ON THE INCOMING WATER LINE. CHECK THERM-X-TROL SIZING CHART FOR PROPER MODEL.
3. REQUIRED WHEN BOILER IS USED FOR BOTH SPACE HEATING AND DOMESTIC HOT WATER, (OR WHEN A FLOW CONTROL IS REQUIRED).



1400 Division Road, West Warwick, RI USA 02893  
T: 800.426.8765 [www.amtrol.com](http://www.amtrol.com)



# PREMIER™ SERIES FOUR TANK INSTALLATION

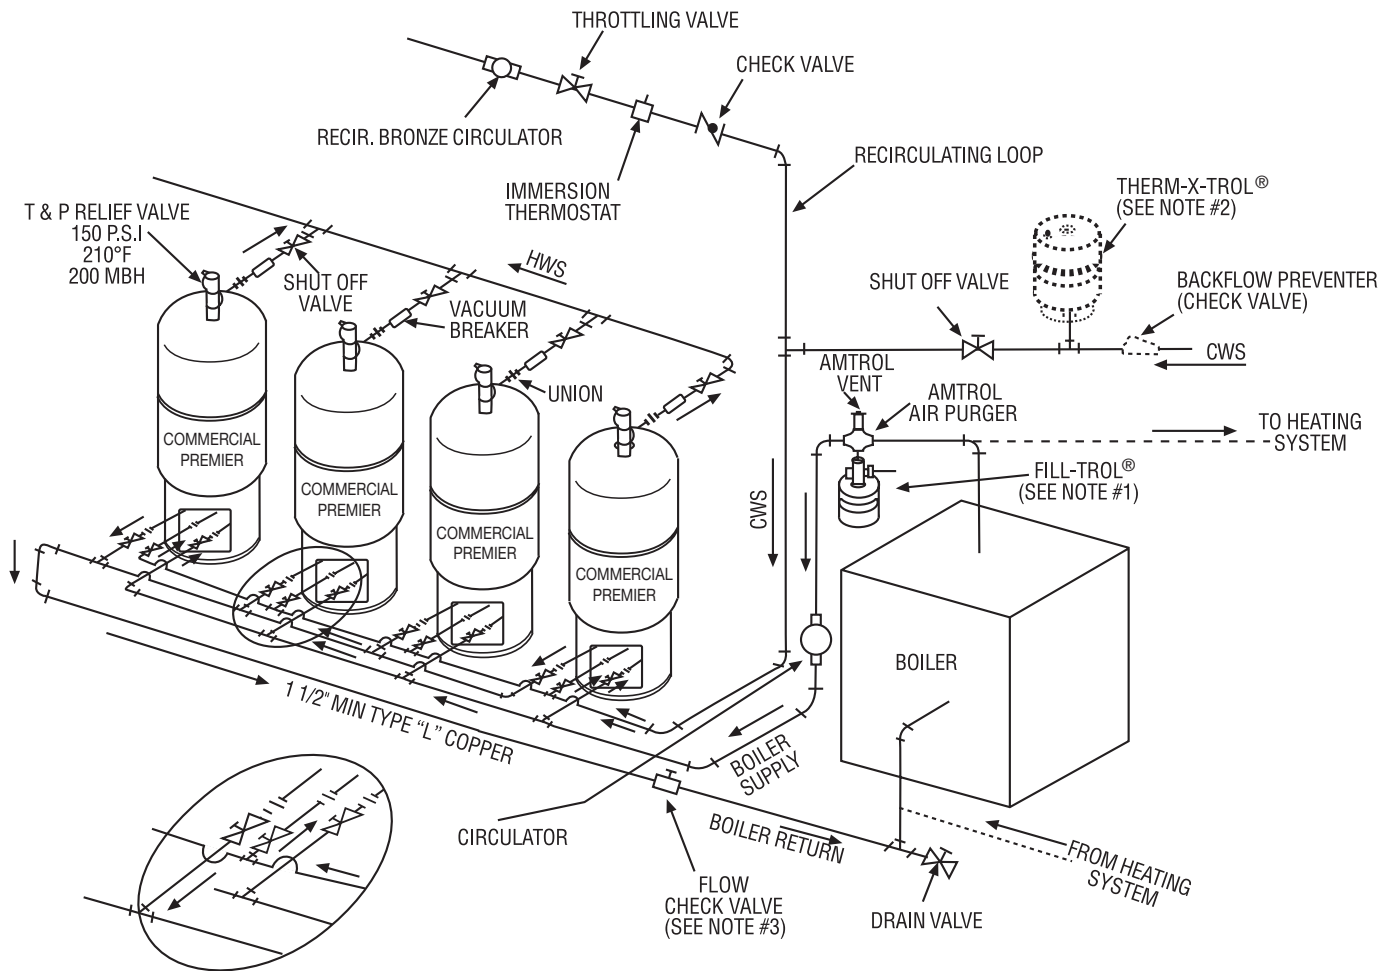

**NOTES:**


1. FILL-TROL MUST BE SIZED TO HANDLE A BOILER SYSTEM THERMAL EXPANSION. ON LARGE SYSTEMS, AN ADDITIONAL EXTROL® MAY BE REQUIRED.
2. THERM-X-TROL IS REQUIRED WHEN THE DOMESTIC WATER SYSTEM HAS A BACKFLOW PREVENTION DEVICE OR CHECK VALVE ON THE INCOMING WATER LINE. CHECK THERM-X-TROL SIZING CHART FOR PROPER MODEL.
3. REQUIRED WHEN BOILER IS USED FOR BOTH SPACE HEATING AND DOMESTIC HOT WATER, (OR WHEN A FLOW CONTROL IS REQUIRED).



1400 Division Road, West Warwick, RI USA 02893  
T: 800.426.8765 [www.amtrol.com](http://www.amtrol.com)



# PREMIER™ SERIES FIVE TANK INSTALLATION

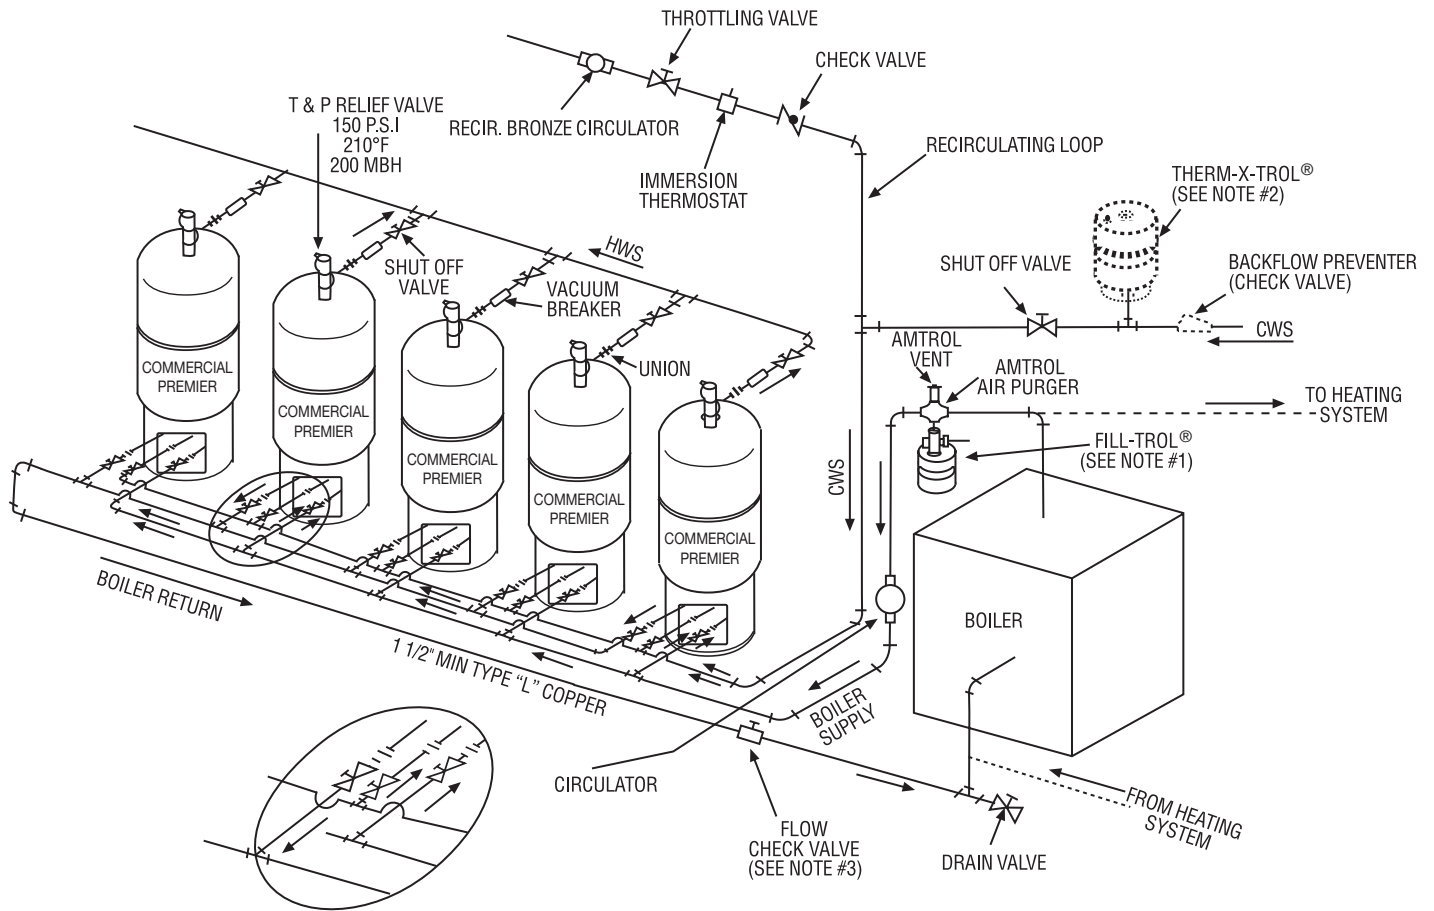

**NOTES:**


1. FILL-TROL MUST BE SIZED TO HANDLE A BOILER SYSTEM THERMAL EXPANSION. ON LARGE SYSTEMS, AN ADDITIONAL EXTROL® MAY BE REQUIRED.
2. THERM-X-TROL IS REQUIRED WHEN THE DOMESTIC WATER SYSTEM HAS A BACKFLOW PREVENTION DEVICE OR CHECK VALVE ON THE INCOMING WATER LINE. CHECK THERM-X-TROL SIZING CHART FOR PROPER MODEL.
3. REQUIRED WHEN BOILER IS USED FOR BOTH SPACE HEATING AND DOMESTIC HOT WATER, (OR WHEN A FLOW CONTROL IS REQUIRED).



1400 Division Road, West Warwick, RI USA 02893  
T: 800.426.8765 [www.amtrol.com](http://www.amtrol.com)



# PREMIER™ SERIES SIX TANK INSTALLATION

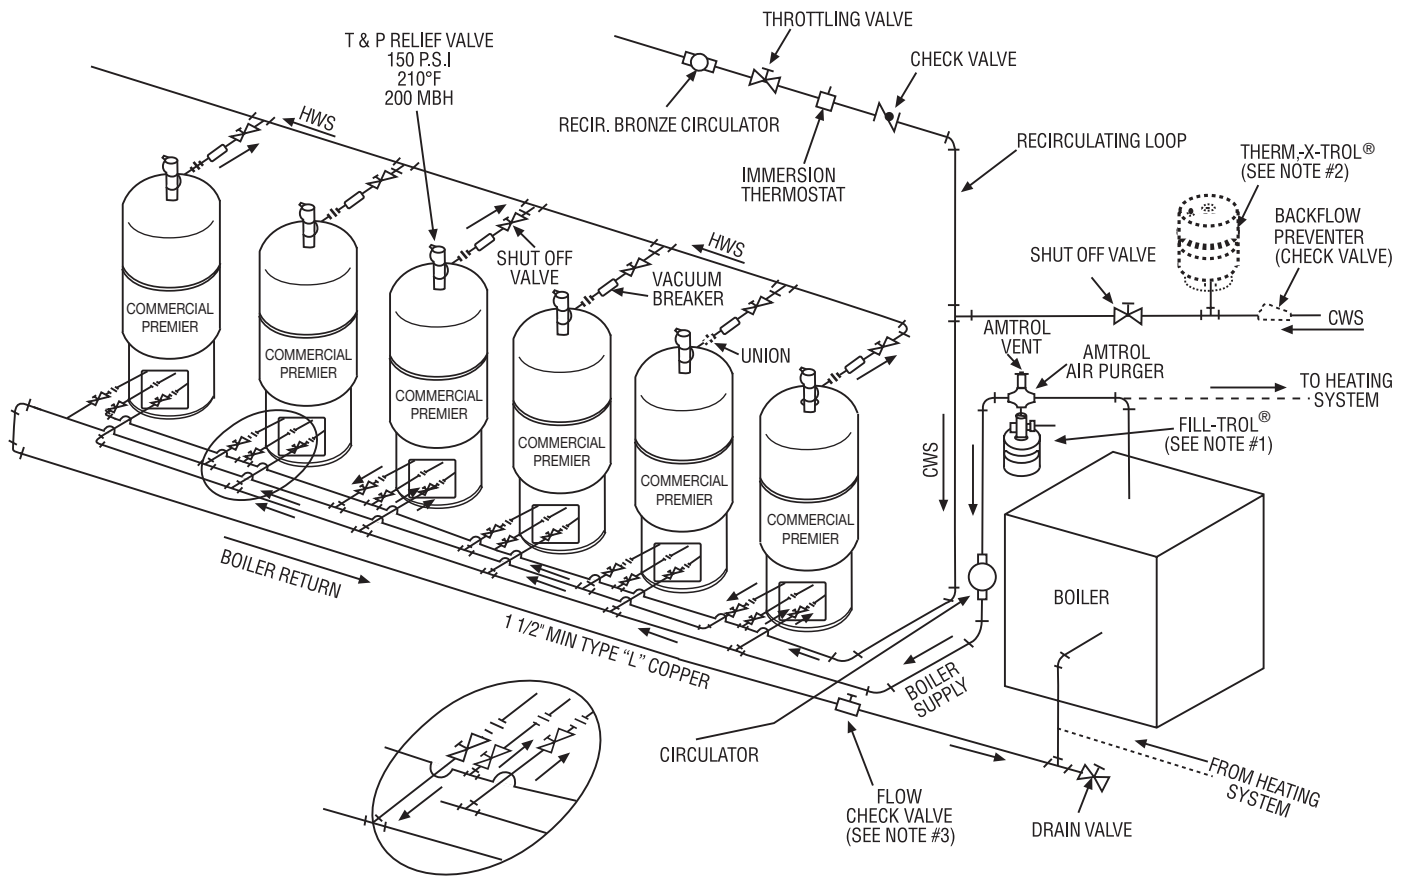

**NOTES:**

1. FILL-TROL MUST BE SIZED TO HANDLE A BOILER SYSTEM THERMAL EXPANSION. ON LARGE SYSTEMS, AN ADDITIONAL EXTROL® MAY BE REQUIRED.
2. THERM-X-TROL IS REQUIRED WHEN THE DOMESTIC WATER SYSTEM HAS A BACKFLOW PREVENTION DEVICE OR CHECK VALVE ON THE INCOMING WATER LINE. CHECK THERM-X-TROL SIZING CHART FOR PROPER MODEL.
3. REQUIRED WHEN BOILER IS USED FOR BOTH SPACE HEATING AND DOMESTIC HOT WATER, (OR WHEN A FLOW CONTROL IS REQUIRED).



1400 Division Road, West Warwick, RI USA 02893  
T: 800.426.8765 [www.amtrol.com](http://www.amtrol.com)